

Position the top flap over the carabiners and mate the corner tabs to the Velcro wraps.



Roll the canopy over onto the risers and container. The line stow pocket will face up. Run the risers along the edge of the container to the bottom corners. Any slack in the line between the french links and the line stow pocket can be tucked into the line stow pocket with a short S-fold. Seat the bag into position in the container.



Close the staging flaps. Route the pilot chute bridle between the right side closing loop and the center loop. Use the long pull-up cords on the outside closing loops and the regular pull-up cord in the center, secure them with temporary pins.



Approximately four inches below the edge of the upper staging flap, fold the bridle back on itself. Make a 45 degree fold to begin the needle fold.

Make a second fold to complete the needle fold. Remove the closing pin and seat the needle fold 1 1/2 inch into the shockcord loop, and remove the pull-up cord.




Extend the bridle to its full length and remove any twists. Bring the bridle end of the pilot chute to the container. Use the flex tool or stiff wire to thread the pull-up cords through the middle of the coil spring and out the grommets on the cap of the pilot chute.





Compress the pilot chute, be careful not to pinch any canopy fabric between the coils of the spring (this causes damage). Pull the closing loops through the grommets and secure them with the temporary pins. Pull all the netting and material out and away from under the spring.

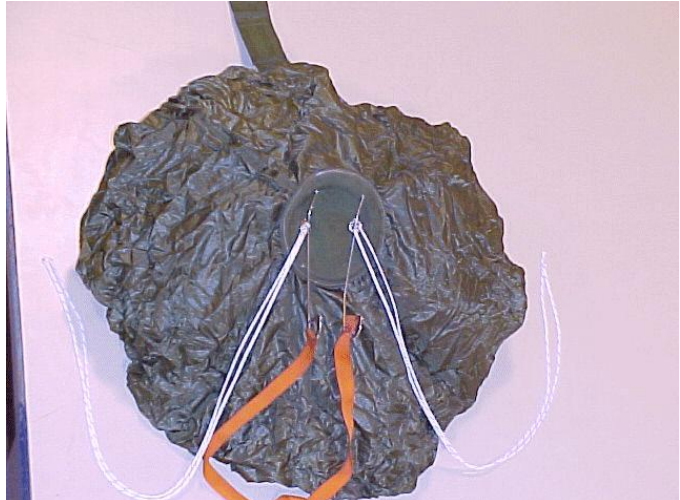

Tuck the pilot chute net and material under the cap of the pilot chute, any excess material can be left at the side and eventually tucked under the side flaps.



Close the side flaps and secure them with the temporary pins. Tuck any excess pilot chute material under the side flaps at this time.

